



LE1313\_SOG10XXX

		Spare part number	Colours available
1	Ignition switch	SSPA0383	
2	Light switch*	SSPA0590	
3	Oven/grill tap	<del>SSPA0455</del> SSPA0460	
4	Knob (1x)	SSPA0938.BK	Black
5	Oven seal	SSPA0063	
6	Cut out thermal (1x NO and 1x NC)	SSPA0511	
7	Oven door (without handle/hinges)	SMAO4230.BK95X	Black
	Spare handle Headon Black 390mm CTRS	SSPA1064	
	Spare hinges	SSPA0015	
8	Glass, inner door	SSPA0255	
9	Oven shelf	SSPA0983	
10	<del>Grill pan</del>	<del>SSPA0993</del>	
	Grill pan + trivet (no handle)	SSPA0992	
11	Oven burner		
	Production date: < 31-07-21 (E212Y...)	SSPA0191	
	Production date: ≥ 01-08-21 (E213Y...)	SSPA0198	
12	Electrode oven	<del>SSPA0628</del>	
13	Thermocouple oven	SSPA0693	
14	Spark generator	SSPA0302	
15	Grill burner		
	Production date: < 26-10-15 (E299S...)	Not available	
	Production date: > 26-10-15 (E299S...)	<del>SSPA0185</del>	
16	Thermocouple grill	SSPA0629	
17	Electrode grill		
18	Fan		
	Production date: < 14-11-2016 (E318T...)	SSPA0520	<i>Modification kit</i>
	Production date: > 14-11-2016 (E318T...)	SSPA0522	
19	Oven lamp*	SSPA0560	

\* Only applicable for models with light inside

~~XXXXX~~ is not available anymore