



		Spare number		
1	Hinge pin			
2	Retaining ring	35788	35782	
3	Cover			35778
4	Seal	08166		
5	Hinge left hand		35787	
6	Hinge right hand	35783		
7	Seat			
8	Cap			
9	Splash guard		35779	
10	Cover & bowl			
11	Vinyl skirt	03984		
12	Inlet tube	03946		
13	Base molding left			
14	Main housing			
15	Main housing seal	35781		
16	Slide ez valve			
	<i>with handle</i>	35770		
	<i>with longer shaft</i>	<del>35771</del>		
	<i>short shaft with hole</i>	35769		
	Seal valve	01436		
	Seal valve	01457		
	Seal repair package	09872		
17	Screw			35776
18	Closet flange seal	24304		
19	Nut		12524	
20	Closet bolt			
21	Handle		35780	
22	Retaining ring			
23	Slide hold downs (2x)			
24	Mounting bracket			
25	Screw			
26	Base molding right			
27	Filter cone	35773		
28	Pump	<del>35784</del>	35774 pump & motor 12V	<del>35775</del> pump & motor 24V
	Motor 12V	35785		
	Motor 24V	35786		
29	Screw			
30	Screw			
31	Gasket	03928		
32	Screw			
33	Lock washer			
34	Nut			
35	Grommet		35772	
36	Level indicator			
37	Cable			
38	Motor cover			
39	Screw		35777	
40	Boot switch	12032		
N/A	Switch push button	35789		

xxxxxx = not available anymore