

**Tools needed**

- Flat-blade screwdriver
- Adjustable Wrench
- Pliers

**Note:**

- Read all instructions before beginning work.

**To Remove Toilet From Floor**

1. Turn off RV water supply per RV Owner's Manual.
2. Press both keypad buttons at the same time, twice, to open blade and drain bowl of water.
3. Pry off Bolt Caps with Flat-blade screwdriver. Use wrench to remove 1/2-inch Lag Screws. Discard Bolt Caps and Washers.
4. Swivel Toilet to gain access to back.
5. Turn off RV's power supply to the Toilet.
6. Disconnect Water Supply Line with Adjustable Wrench.
7. Disconnect Water Supply Line.
8. Disconnect Toilet's 12-volt power hookup to RV.
9. Lift Toilet from floor.
10. Remove old Closet Flange Seal (may be found in toilet or in floor at Closet Flange). Discard.

**To Replace Toilet To Floor**

1. Secure new Closet Flange Seal, lip side up, to Toilet.
2. Position Toilet over flange.
3. Reconnect Water Supply Line.
4. Reconnect 12-volt power supply to Toilet.
5. Reconnect RV's power supply to the Toilet.
6. Turn on RV's water supply. Press Toilet flush button to close blade and to flush test.
7. Secure to floor with new Lag Screws and Washers. Tighten.
8. Resecure Bolt Caps.

