
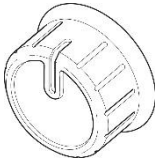
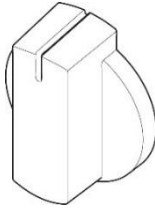


LE1310\_SOG70XXX\_ELECTRIC\_SPARK



		Spare part number	Spare part number	Colours available
1	Oven/grill tap			
	<i>Production date: &lt; 16-02-07 (2007015002)</i>	SSPA0455		
	<i>Production date: &lt; 13-01-14 (E013R...)</i>	SSPA0456		
	<i>Production date: ≥ 13-01-14 (E013R...)</i>	SSPA0457		
	<i>Production date: ≥ 29-01-24 (E029A...)</i>	SSPA0461		
2	Control knob	Refer to page 3		
3	Ignition switch <b>*12V ignition models only</b>	Refer to page 3		
4	Light switch <b>*if fitted</b>	SSPA0591		
5	Oven door seal	SSPA0062		
6	Piezo ignition <b>*if fitted</b>	Refer to page 3		
7	Oven door (without handle/hinges)	Refer to page 4		
8	Inner door glass	SSPA0253		
9	Oven shelf	SSPA0982		
		SSPA0980		
10	Grill pan (full assy including trivet and handle)	SSPA0993		
	Grill pan + trivet (no handle)	SSPA0992		
11	Oven burner			
	<i>Production date: &lt; 31-07-21 (E212Y...)</i>	SSPA0191		
	<i>Production date: ≥ 01-08-21 (E213Y...)</i>	SSPA0198		
12	Oven spark electrode	SSPA0626 ≥ 06-12-16 (E340T.....)	SSPA0606 < 06-12-16 (E340T...)	
13	Oven thermocouple	SSPA0695 ≥ 12-06-24		
14	Grill spark electrode	SSPA0627 ≥ 06-12-16 (E340T.....)	Modification kit	
15	Grill thermocouple	SSPA0695 ≥ 12-06-24		
16	Grill door shut-off switch <b>*if fitted</b>	SSPA0605		
17	Grill burner			
	<i>Production date: &lt; 26-10-15 (E299S...)</i>	No longer available		
	<i>Production date: ≥ 26-10-15 (E299S...)</i>	SSPA0185		
		SSPO1104		
	<i>Production date: ≥ 29-01-24 (E029A..)</i>	SSPA0188		
18	Spark generator	Refer to page 4		
19	Oven lamp <b>*if fitted</b>	SSPA0560		

XXXX is not available anymore

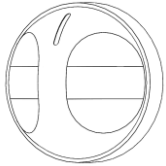


**Control knobs**

<b>Control Knob</b>			
<b>Spare part number</b>	SSPA0916	SSPA0911	SSPA0920
<b>Colours available</b>	Brushed-Nickel/Black (.BNK)	Black (.BK) Matt Nickel (.MNK)	Black (.BK)
<b>Set quantity</b>	3,0	3,0	3,0



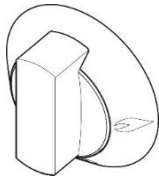
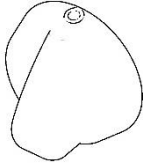
**Control knobs**

<b>Control Knob</b>		
<b>Spare part number</b>	SSPA0934	SSPA0938
<b>Colours available</b>	Satin (.SA)	Black (.BK) Matt Nickel (.MNK)
<b>Set quantity</b>	2	1

**Ignition switches**

			
<b>Description</b>	Ignition switch round	Ignition switch rectangular	Piezo ignition
<b>Spare part number</b>	SSPA0380	SSPA0381	SSPA0382

## Spark generator

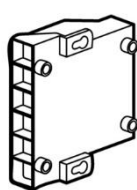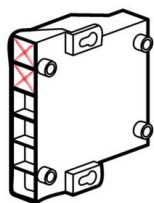





<b>Description</b>	4 terminals, 2 blanks	6 terminals	6 terminals	2 terminals
<b>Spare part number</b>	<del>SSPA0303</del> SSPA0300	SSPA0399	SSPA0301	SSPA0302 (> 01/09/2022)

## Oven doors (without handle and hinges)

Spare part number	Glass	Print	Cladding	Cladding Position	Handle Style	Hinges
SMAO3435.BK99X	Clear	Black	No	N/A	N/A	SSPA1791
SMAO3435.BK97X	Clear	Black	Yes	Bottom	N/A	SSPA1791
SMAO3435.MIR99X	Mirror	Black	No	N/A	N/A	SSPA1791
SMAO3435.SS99X	Sparkling stainless	Black	No	N/A	N/A	SSPA1791

## Handles oven doors

Spare part number	Centres (mm) handle fixings	Handle Style	Handle Colour
SSPA1053 HANDLE.T-BAR 12mm	390 CRS		Stainless
SSPA1056 HANDLE ALPS 60-CHROME OX	390 CRS		Chrome
SSPA1060 HANDLE. V CUT. BRIGHT NICKEL	390 CRS		Bright Nickel
SSPA1064 HANDLE HEADON BLACK	390 CRS		Black

~~XXXXXX~~ is not available anymore