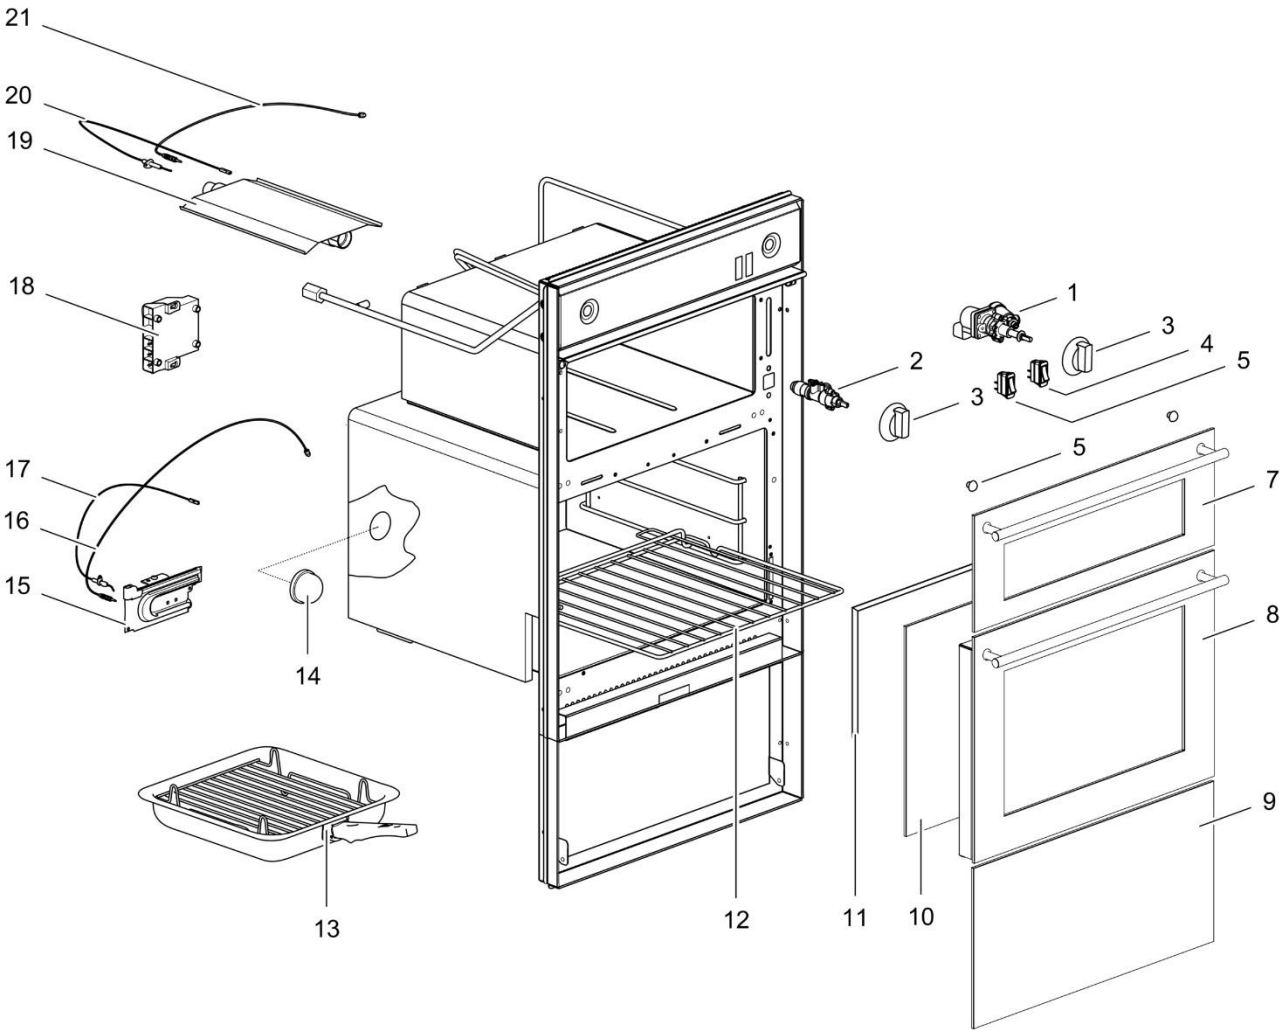


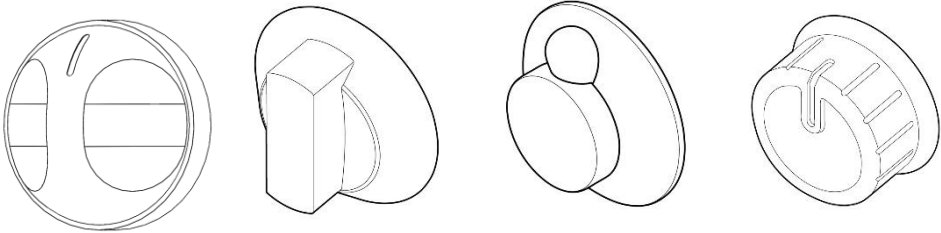


LE1328_SOV70XXX

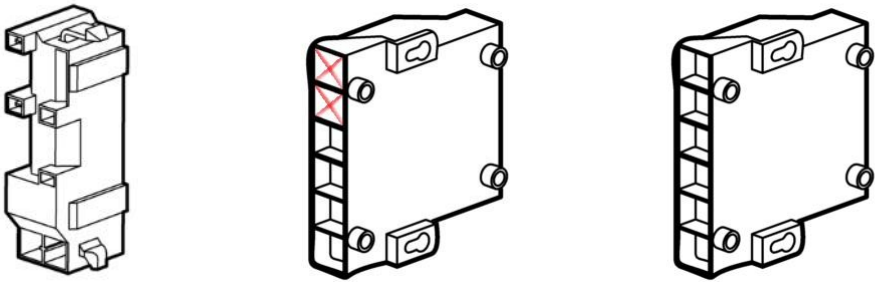
		Spare part number	Spare part number
1	Oven tap		
	<i>Production date: < 14/03/2011 (E073M...)</i>	SSPA0452	
	<i>Production date: ≥ 14/03/2011 (E073M...)</i>	SSPA0451	
2	Grill tap		
	<i>Production date: < 14/03/2011 (E073M...)</i>	SSPA0472	
	<i>Production date: ≥ 14/03/2011 (E073M...)</i>	SSPA0470	
	<i>Production date: ≥ 01/10/2022 (E274Z...)</i>	SSPA0474	
3	Control knobs	Refer to page 3	
4	Ignition switch	SSPA0381	
5	Light switch *if fitted	SSPA0591	
6	Bump Stops	SSPA0040	
7	Grill door (without handle)	Refer to page 4	
8	Oven door (without handle/hinges)	Refer to page 4	
9	Lower door	Refer to page 4	
10	Inner door glass	SSPA0253	
11	Oven seal	SSPA0062	
12	Oven shelf	SSPA0980	
13	Grill pan (full assembly including trivet and handle)	SSPA0993	
	Grill pan + trivet	SSPA0992	
14	Oven lamp *if fitted	SSPA0560	
15	Oven burner		
	<i>Production date: < 31-07-21 (E212Y...)</i>	SSPA0191	
	<i>Production date: ≥ 01-08-21 (E213Y...)</i>	SSPA0198	
16	Oven thermocouple (including electrode)		
	<i>Production date: < 14/03/2011 (E073M...)</i>	SSPA0642	
	<i>Production date: ≥ 14/03/2011 (E073M...)</i>	SSPA0623	
17	Oven spark electrode (including part 21)	SSPA0321	
18	Spark generator	Refer to page 3	
19	Grill burner		
	<i>Production date: < 13/04/2015 (E103S...)</i>	No longer available	
	<i>Production date: ≥ 13/04/2015 (E103S...)</i>	SSPA0185	
20	Grill thermocouple		
	<i>Production date: < 29/10/07 (2007090212)</i>	SSPA0157	
	<i>Production date: < 14/03/11 (E073M...)</i>	SSPA0643	
	<i>Production date: ≥ 14/03/11 (E073M...)</i>	SSPA0645	
21	Grill spark electrode (including part 17)	SSPA0321	

~~XXXXX~~ = not available anymore

Control knobs

Control knob sets				
	SSPA0920	SSPA0934	SSSPA1203	SSPA0916
Colours available	Black(.BK)	Chrome-Black(.CR/BK) Satin Black(.SA/BK)	Chrome(.CR)	Brushed Nickel(.BNK)
Set quantity	3	3	3	3

Spark generators

			
	2 terminals	4 terminals, 2 blanks	6 terminals
Description	2 terminals	4 terminals, 2 blanks	6 terminals
Spare part number	SSPA0302	SSPA0303	SSPA0399

Handles are being supplied separately; hinges only where applicable

Grill doors (without handle)

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO3415.BK99X	Clear	Black	No	N/A	N/A	Yes
SMAO3405.BK99X	Clear	Black	No	N/A	N/A	Yes

Drop Down oven doors (without handle and hinges)

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO3435.BK99X	Clear	Black	No	N/A	N/A	SSPA1791
SMAO3435.SS99X	Clear	Silver	No	N/A	N/A	SSPA1791

Handles grill and oven doors

Spare part number	Centres (mm) Handle fixings	Handle Style	Handle Colour
SSPA1053 HANDLE.T-BAR 12mm SS	390 CRS		Stainless
SSPA1057 HANDLE ALPS 30- BRUSHED INOX	390 CRS		Brushed Nickel
SSPA1068 HANDLE. ALPS 60-. BRUSHED INOX.	390 CRS		Brushed Nickel

Lower doors

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Handle colour
SMAO3450.BKX	Clear	Black	No	N/A	N/A	N/A
SMAO3450.BK/SVSX	Clear	Black & Silver	No	N/A	N/A	N/A
SMAO3450.MIRX	Mirror	N/A	No	N/A	N/A	N/A