

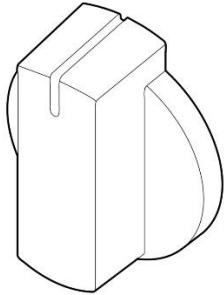
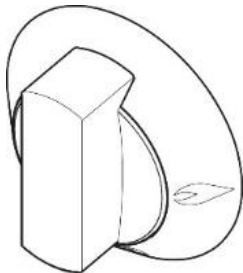
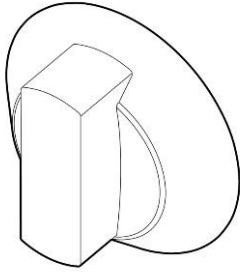
LE1311\_SOP139XX

		Spare part number	Spare part number	Colours available
1	Grill door bump	SSPA0040		
2	Light switch	SSPA0590		
3	Ignition switch	SSPA0380		
4	Oven tap			
	Production Date: < 20/03/11 (E079M...)	SSPA0452		
	Production Date: ≥ 21/03/11 (E080M...)	SSPA0451		
5	Grill tap			
	Production Date: < 20/03/11 (E079M...)	SSPA0472		
	Production Date: ≥ 21/03/11 (E080M...)	SSPA0470		
	Production Date: ≥ 01/10/2022 (E274Z..)	SSPA0474		
6	Control knobs	<i>Refer to page 3</i>		
7	Cut out thermal (1x NO and 1x NC)	SSPA0510		
8	Grill door (without handle/hinges)	<i>Refer to page 4</i>		
9	Oven door (without handle/hinges)	<i>Refer to page 4</i>		
10	Glass, inner door	SSPA0253		
11	Oven seal	SSPA0062		
12	Oven shelf	SSPA0980		
13	<del>Grill pan</del>	<del>SSPA0991</del>		
	Grill pan + trivet (no handle)	SSPA0992		
14	Shut off			
	Production Date: < 28/11/11 (E087M...)	Not available		
	Production Date: ≥ 29/11/11 (E333M...)	SSPA0605		
15	Oven lamp*	SSPA0560		
16	Oven burner			
	Production date: < 31-07-21 (E212Y...)	SSPA0191		
	Production date: ≥ 01-08-21 (E213Y...)	SSPA0198		
17	Thermocouple oven			
	Production Date: < 20/03/11 (E079M...)	SSPA0642		
	Production Date: ≥ 21/03/11 (E080M...)		SSPA0623	
18	Electrode oven	SSPA0321		
19	Spark generator	<i>See Page 3</i>		
20	Fan			
	Production Date: < 29/02/16 (E060T...)	SSPA0520		
	Production Date: ≥ 01/03/16 (E061T...)	SSPA0522		
21	Grill burner			
	Production Date: ≤ 26/04/15 (E116S...)	Not available		
	Production Date: ≥ 27/04/15 (E117S...)	<del>SSPA0185</del>		
22	Thermocouple and electrode grill			
	Production Date: < 23/03/11 (E082M...)	<del>SSPA0624</del>		
	Production Date: ≥ 24/03/11 (E083M...)	SSPA0630		
	Production Date: ≥ 28/11/11 (E332M...)	SSPA0625		
	Production Date: ≥ 24/03/13 (E083P...)	SSPA0631		

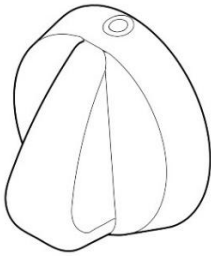
\* Only applicable for models with light inside

~~XXXX~~ is not available anymore



**Control knobs**

<b>Control Knob</b>			
	<b>Spare part number</b>	SSPA0911	SSPA0934
<b>Colours available</b>	Matt Nickel (.MNK)	Chrome (.CR) Satin (.SA)	Chrome (.CR)
<b>Set quantity</b>	3	2	2

**Control knobs**

<b>Control Knob</b>	
<b>Spare part number</b>	SSPA0939
<b>Colours available</b>	Black (.BK)
<b>Set quantity</b>	4

**Spark generators**

		
<b>Description</b>	2 terminals, 4 blanks	6 terminals
<b>Spare part number</b>	SSPA0302	SSPA0301

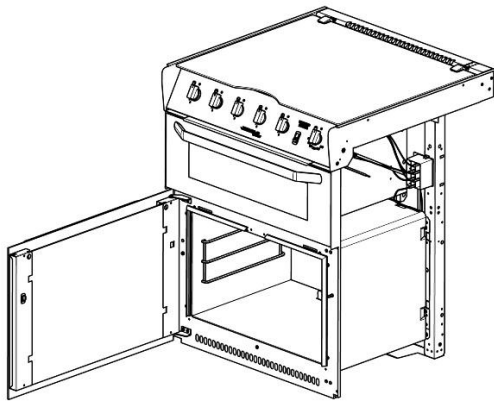
**Handles are being supplied separately; hinges only where applicable**

**Grill doors (without handle and hinges)**

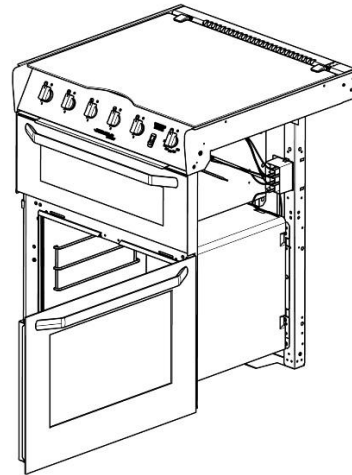
Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO4120.BK95X	Clear	Black	Yes	Sides	N/A	SSPA0014
SMAO4120.BK99X	Clear	Black	No	N/A	N/A	SSPA0014

**Oven door styles**

**Left hinged oven doors**



**Right hinged oven doors**



**Drop Down oven doors (without handle and hinges)**

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO4130.BK95X	Clear	Black	Yes	Sides	N/A	SSPA1791
SMAO4130.BK99X	Clear	Black	No	N/A	N/A	SSPA1791



## Left hinged oven doors (without handle)

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO4135.BK99X	Clear	Black	No	N/A	N/A	Yes
SMAO4135.BK95X	Clear	Black	Yes	Sides	N/A	Yes

## Right hinged oven doors (without handle)

Spare part number	Glass	Print	Cladding	Cladding position	Handle style	Hinges
SMAO4135.BK99X	Clear	Black	No	N/A	N/A	Yes
SMAO4135.BK95X	Clear	Black	Yes	Sides	N/A	Yes

## Handles grill and oven doors

Spare part number	Centres (mm) handle fixings	Handle Style	Handle Colour
SSPA1060 HANDLE. V CUT. BRIGHT NICKEL	390 CRS		Bright Nickel
SSPA1064 HANDLE HEADON BLACK	390 CRS		Black